l v





(909) 222-0202

features

2



The RT535E incorporates a rectangular boom shape made from 100k.s.i. steel which eliminates weight and improves capacity compared to conventional shapes.



Rounded steel cab design provides aesthetic appeal.



Max. tip height of 154 ft. (47.0 m) w/45 ft. (13.7 m) tele. extension



New look dash control panel designed to offer a less cluttered look while still offering full instrumentation.



Cummins QSB 5.9L diesel engine provides plenty of power at the jobsite.

Annual States

anitowoc

specifications

Superstructure

Boom

32 ft. - 102 ft. (9.8 m - 31.0 m) four-section, synchronized full power boom. Maximum tip height: 110 ft. (33.6 m).

*Optional Fixed Swingaway Extension

26 ft. (7.9 m) offsettable swingaway extension. Offsets 0° and 30° . Stows alongside base boom section. Maximum tip height: 135 ft. (41.1 m).

*Optional Telescopic Swingaway Extension

26 ft. - 45 ft. (7.9 m - 13.7 m) offsettable telescoping swingaway extension. Offsets at 0° and 30°. Stows alongside base boom section.

Maximum tip height: 154 ft. (47.0 m).

Boom Nose

Four nylatron sheaves mounted on heavy duty tapered roller bearings with removable pin-type rope guards. Quick reeve type boom nose.

Boom Elevation

One double-acting hydraulic cylinder with integral holding valve provides elevation from -3° to +78°.

Load Moment & Anti-Two Block System

Standard "Graphic Display" load moment and anti-two block system with audio-visual warning and control lever lockout. These systems provide electronic display of boom angle, length, radius, tip height, relative load moment, maximum permissible load, load indication and warning of impending two-block condition. The standard Work Area Definition System allows the operator to pre-select and define safe working areas. If the crane approaches the pre-set limits, audio-visual warnings aid the operator in avoiding job-site obstructions.

🕒 Cab

 
Full-vision, all-steel fabricated with acoustical lining and tinted safety glass throughout. Deluxe seat incorporates armrest mounted electric dual-axis controllers. Dash panel incorporates gauges for all engine functions. Other standard features include: tilt steering wheel, hot water heater, cab circulating air fan, sliding side and rear windows, sliding skylight with electric wiper and sunscreen, electric windshield wash/wipe, fire extinguisher and seat belt.

Swing

Single speed, planetary swing drive with foot applied multi-disc wet brake. Spring applied, hydraulically released swing brake. Single position mechanical house lock, operated from cab. Maximum speed: 2.0 RPM.

Counterweight

9,920 lbs. (4 500 kg). Pinned to superstructure.



Two main pumps ([1] piston and [1] gear) with a combined capacity of 83.6 GPM (316.5 LPM).

Maximum operating pressure: 4,000 PSI (275.7 bar). Three section pressure compensated valve bank. Return line type filter with full flow by-pass protection and service indicator. Replaceable cartridge with micron filtration rating of 5/12/16. 104.6 gallon (396 L) hyd. reservoir. System pressure test ports.

HOIST SPECIFICATIONS (HP15C-17G) Main and Auxiliary Hoist

Planetary reduction with automatic spring applied multi-disc wet brake. Electronic hoist drum rotation indicators, and hoist drum cable followers.

Maximum Single Line Pull:

1st layer:	11,640 lbs. (5 280 kg)
3rd layer:	9,530 lbs. (4 323 kg)
5th layer:	8,060 lbs. (3 656 kg)

Maximum Permissible Line Pull: 11,640 lb. (5 280 kg) with 6x37 class rope 11,640 lb. (5 280 kg) with 35x7 class rope

Maximum Single Line Speed: 445 FPM (136 m/min)

Rope Construction: 6x36 EIPS IWRC, Special Flexible 35x7 Flex-X, Rotation Resistant

Rope Diameter:	5/8 in. (16 mm)
Rope Length: Main Hoist: Auxiliary Hoist:	450 ft. (137.0 m) 450 ft. (137.0 m)
Maximum Rope Stowage:	596 ft. (181.0 m)

*Denotes optional equipment



specifications

Carrier

🗄 Chassis

Box section frame fabricated from high-strength, low alloy steel. Front/rear towing and tie down lugs.

L- Outrigger System

Four hydraulic telescoping single-stage double box beam outriggers with inverted jacks and integral holding valves. Three position setting, 0%, 50% and fully extended. All steel fabricated, quick release type outrigger floats, 14.25 in. (362 mm) square.

Maximum outrigger pad load: 58,000 lbs. (26 308 kg)

Utrigger Controls

Controls and crane level indicator located in cab.

Engine (Tier II)

Cummins QSB 5.9L diesel, six cylinders, 155 bhp (116 kW) (Gross) @ 2,500 RPM.

Maximum torque: 440 ft. lbs. (597 Nm) @ 1,500 RPM.

Fuel Tank Capacity

58 gallons (219.5 L)

CTransmission

Range-shift 6 speed (3 speeds x 2 range, both forward & reverse). Front axle disconnect for 4 x 2 travel.

Electrical System

Two 12 V - maintenance free batteries. 12 V starting and lighting. Battery disconnect. CanBus Diagnostic system.

I---I Drive

4 x 4

TSteering

Fully independent power steering:

Front: Full hydraulic steering wheel controlled.

Rear[.] Full hydraulic switch controlled.

Provides infinite variations 4 main steering modes: front only, rear only, crab and coordinated. Rear steer indicator. Turning radius: 19 ft. (5.8 m)



- Axles

Drive/steer with differential and planetary reduction hubs rigid mounted to frame.

Drive/steer with differential and planetary reduction hubs pivot mounted to frame.

Interim Oscillation Lockouts

Automatic full hydraulic lockouts on rear axle permits 10 in. (25.4 cm) oscillation only with boom centered over the front.

O Brakes

Full hydraulic split circuit operating on all wheels. Springapplied, hydraulically released parking brake mounted on front axle



Std. 20.5 x 25 - 24 bias ply, General

Lights

Full lighting including turn indicators, head, tail, brake and hazard warning lights.



25 MPH (40 kph) @ 2500 r.p.m.

Gradeability (Theoretical)

119% (at engine stall)

Based on 61,640 lb. [27 960 kg] GVW) 20.5 x 25 tires, 102 ft. (31.0 m) main boom, plus 45 ft. (13.7 m) telescopic swingaway, 9,920 lb. (4 500 kg) counterweight, 35T hookblock and 7.5T headache ball.

Miscellaneous Standard Equipment

Full width steel fenders, full length steel decking with anti-skid, dual rear view mirrors, hook-block tie down, electronic back-up alarm, light package, front stowage well, tachometer/hourmeter, rear wheel position indicator, 36,000 BTU hot water cab heater, hoist mirrors, engine distress A/V warning system, front/rear tie down and tow lugs, coolant sight lever indicator.

*Optional Equipment

* AUXILIARY HOIST PACKAGE (includes Model HP15C-17G auxiliary hoist with electronic hoist drum rotation indicator, hoist drum cable follower, 450 ft. (137.0 m) of 5/8 in. (16 mm) 35 x 7 class wire rope and auxiliary single sheave boom nose. *AUXILIARY LIGHTING PACKAGE (includes cab mounted amber flashing light, hoist mounted work light, and dual base boom mounted floodlights). *LMI light bar (in cab) *Air conditioning (28,500 BTU) *360° NYC style mechanical swing lock *Rear pintle hook

*Cab controlled cross axle differential locks (front and rear)

*PAT data logger down-load kit

*Rubber mat for stowage trough


*Denotes optional equipment






Rear:

dimensions

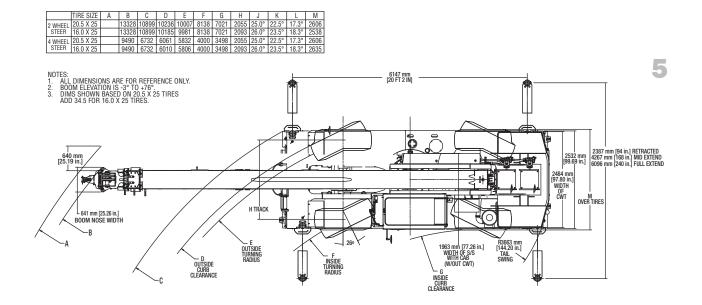

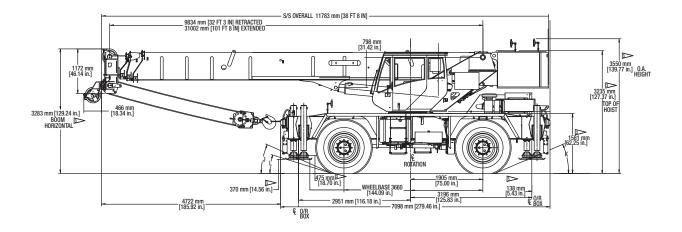

Weights


3

	Gross	Front	Rear
	(lbs. / kg.)	(lbs. / kg.)	(lbs. / kg.)
Basic Machine including 102 ft. (31.0m) main			
boom, main hoist with 450 ft. (137.0m) of			
rope, full counterweight + IPO, 7.5 T (6.8mt)	59,135	27,717	31,418
headache ball, and 35T (35mt) hookblock:	(26 823 kg)	(12 572 kg)	(14 251 kg)
Add: Auxiliary Hoist + 450 ft. (137.0m) of			
35×7 hoist cable and auxiliary boom nose	59.634	27,886	31,748
ILO IPO C/W	(27 050 kg)	(12 649 kg)	(14 400 kg)
ADD: Fixed 26 ft. (7.9m) offsttable boom	61,170	30,655	30,515
extension + extension hangers	(27 746 kg)	(13 905 kg)	(13 842 kg)
OR			
ADD: 26 ft 45 ft. (7.9 - 13.7m) telescopic	61,640	31,459	30,181
boom extension + extension hangers	(27 960 kg)	(14 269 kg)	(13 690 kg)
boom extension + extension hangers	(27 960 Kg)	(14 289 Kg)	(13 6901

RT535E

working range



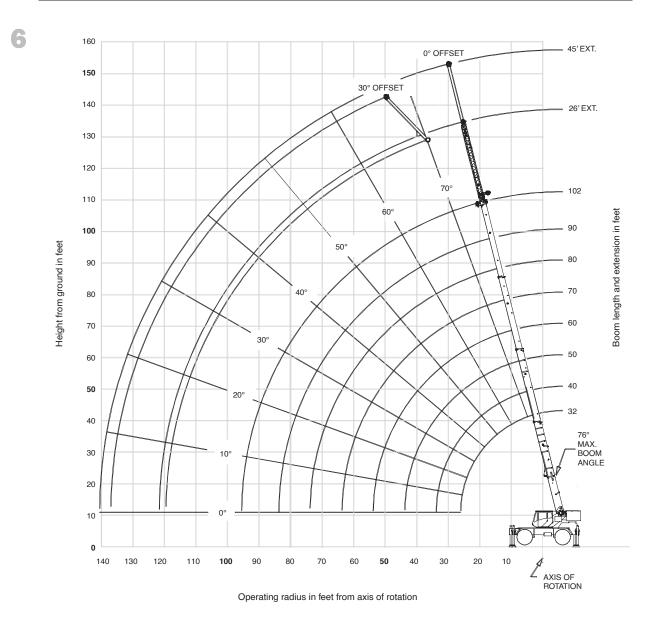

Dimensions are for largest Grove furnished hook block and headache ball, with anti-two block activated.



THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

3

RT535E load chart

32 - 102 ft.	9,920 lbs	100%	Q 360°						
		20' spread		F	ounds				
G									
Feet	32	40	50	60	70	80	90	102	_
10	70,000 (65)	50,100 (70.5)	*47,000 (76)						
12	56,500 (60.5)	50,100 (67)	47,000 (72)	*46,000 (76)					
15	46,500	47,350	46,000	43,000	*38,000				
	(54) 33,800	(62) 34,000	(68.5) 34,000	(72.5) 34,000	(76) 30,000	28,000	*22,000		
20	(41)	(53.5)	(62)	(67.5)	(71)	(74)	(76)		_
25	25,000 (20)	26,000 (43)	26,300 (55)	26,000 (62)	25,000 (66.5)	23,500 (70)	21,000 (73)	*18,000 (76)	
30		20,000 (29.5)	20,500 (47.5)	20,500 (56)	21,000 (62)	20,000 (66)	18,000 (69.5)	16,300 (72)	
35		(29.3)	16,000	16,500	17,500	17.000	15,500	14,400	
30			(38.5)	(50)	(57)	(62)	(66)	(69)	
40			13,000 (26.5)	13,500 (43)	13,500 (52)	14,000 (58)	13,100 (62)	12,600 (66)	
45				11,200 (35)	10,750 (46)	11,500 (53.5)	11,250 (58.5)	11,000 (63)	
50				9,000	9,000	9,500	9,000	9,300	_
				(24)	(40) 7,300	(48.5) 8,000	(54.5) 7,500	(59.5) 7,800	
55					(32.5)	(43.5)	(50.5)	(56.5)	
60					6,200 (22.5)	6,600 (37.5)	6,300 (46)	6,450 (52.5)	
65						5,500 (30.5)	5,300 (41)	5,300 (49)	
70						4,500	4.500	4,400	
						(21)	(35.5) 3,800	(45) 3,800	
75							(29)	(40.5)	
80							3,200 (20)	3,200 (35.5)	
85								2,600 (29.5)	
90								2,200 (22.5)	
95								1.600	
	ngle (°) for indicate							(9)	
	ength (ft) at 0° boor							102	

boom length (ft) at 0° boom

NOTE: () Boom angles are in degrees. #LMI operating code. Refer to LMI manual for operating instructions. *This capacity is based on maximum boom angle.

Lifting Capacities at Zero Degree Boom Angle								
Boom				Boom Length in Fee				
Angle	32	40	50	60	70	80	90	102
0°	24,000	17,000	11,000	8,000	5,000	3,500	2,300	1,250
Ŭ	(26)	(33.8)	(43.8)	(53.8)	(63.8)	(73.8)	(83.8)	(95.5)

NOTE: () Reference radii in feet.

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

GROVE.

A6-829-104120

RT535E load chart

	32 - 102 ft.	26 - 45 ft.	9,920 lbs	100%	(Q) 360°
8				20' spread Pounds)
0		**26 ft. LE		45 ft. LE	INGTH
	 Feet	#0021 0° OFFSET	#0023 30° OFFSET	#0041 0° OFFSET	#0043 30° OFFSET
	35	8,200 (75)	OFFSET	OFFICE	OFFICE
	40	8,200 (72.5)		*5,250 (76)	
	45	8,200 (70.5)	*5,780 (76)	5,250 (74)	
	50	8,150 (68)	5,780 (72.5)	5,050 (72)	
	55	7,500 (65)	5,450 (70)	4,650 (70)	
	60	6,440 (62.5)	4,910 (67)	4,290 (67.5)	*2,730 (76)
	65	5,460 (60)	4,450 (64.5)	4,000 (65.5)	2,730 (72.5)
	70	4,620 (57)	4,050 (61.5)	3,800 (63)	2,730 (70.5)
	75	3,900 (54.5)	3,670 (58.5)	3,650 (61)	2,600 (68)
	80	3,260 (51.5)	3,350 (55.5)	3,520 (58.5)	2,520 (65.5)
	85	2,710 (48)	3,100 (52)	3,360 (56)	2,470 (63)
	90	2,210 (45)	2,580 (48.5)	2,980 (53.5)	2,420 (60)
	95	1,770 (41)	2,080 (45)	2,530 (51)	2,390 (57.5)
	100	1,380 (37.5)	1,620 (40.5)	2,130 (48)	2,380 (54.5)
	105	1,020 (33)	1,200 (36)	1,770 (45)	2,310 (51.5)
	110			1,450 (42)	1,910 (48)
	115			1,130 (38.5)	1,530 (44.5)
	120				1,180 (40)
	Min. boom angle for indicated length (no load)	32°	35°	37°	39°
	Max. boom length at 0° boom angle (no load)	8	D ft.	80 ft.	

(N Ioka) NOTE: () Boom angles are in degrees. #LMI operating code. Refer to LMI manual for instructions. "This capacity based on maximum boom angle. *26 ft. capacities are also applicable to fixed offsetable ext. However, the LMI codes will change to #0051 and #0053 for 0° and 30° offset, reconclined). respectively.

BOOM EXTENSION CAPACITY NOTES:

- 1. All capacities above the bold line are based on structural strength of boom extension.
- 2. 26 ft. and 45 ft. boom extension lengths may be used for single line lifting service.
- 3. Radii listed are for a fully extended boom with the boom extension erected. For main boom lengths less than fully extended, the rated loads are determined by boom angle. Use only the column which corresponds to the boom extension length and offset for which the machine is configured. For boom angles not shown, use the rating of the next lower boom angle.

WARNING: Operation of this machine with heavier loads than the capacities listed is strictly prohibited. Machine tipping with boom extension occurs rapidly and without advance warning.

- 4. Boom angle is the angle above or below horizontal of the longitudinal axis of the boom base section after lifting rated load.
- 5. Capacities listed are with outriggers fully extended and vertical jacks set only.
- 6. When lifting over the main boom nose with 26 ft. or 45 ft. extension erected, the outriggers must be fully extended or 50% extended (14' spread).

RT535

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

A6-829-104123



RT535E load charts

			Q						
2 - 102 ft.	9,920 lbs	50% 14' spread	360°						
				F	ounds				
Feet	30	40	50	60	70	80	90	102	
10	68,700 (65)	50,100 (70.5)	*47,000 (76)						
12	56,500 (60.5)	50,100 (67)	47,000 (72)	*46,000 (76)					
15	46,100 (54)	44,200 (62)	41,750 (68.5)	39,500 (72.5)	*37,550 (76)	1			
20	26,850 (41)	27,550 (53.5)	27,050 (62)	25,950 (67.5)	24,950 (71)	24,000 (74)	*22,000 (76)		
25	17,450 (20)	18,050 (43)	18,650 (55)	18,600 (62)	18,050 (66.5)	17,450 (70)	16,950 (73)	*16,300 (76)	
30	(20)	12,700 (29.5)	13,200 (47.5)	13,500 (56)	13,550 (62)	13,250 (66)	12,900 (69.5)	12,500 (72)	
35		(20.0)	9,700 (38.5)	10,050 (50)	10,200 (57)	10,250 (62)	10,100 (66)	9,810 (69)	
40			7,260 (26.5)	7,570 (43)	7,770 (52)	7,910 (58)	7,940 (62)	7,810 (66)	
45			(2010)	5,750 (35)	5,940 (46)	6,110 (53.5)	6,180 (58.5)	6,200 (63)	
50				4,350 (24)	4,540 (40)	4,700 (48.5)	4,790 (54.5)	4,860 (59.5)	
55				(= -)	3,430 (32.5)	3,590 (43.5)	3,690 (50.5)	3,780 (56.5)	
60					2,530 (22.5)	2,680 (37.5)	2,790 (46)	2,890 (52.5)	
65					(22.0)	1,940 (30.5)	2,040 (41)	2,150 (49)	
70						1,310 (21)	1,420 (35.5)	1,530 (45)	
	ngle (°) for indicated l ength (ft.) at 0° boom	• • •				0	20 80	36	

2

NOTE: () Boom angles are in degrees. #LMI operating code. Refer to LMI manual for operating instructions. *This capacity is based on maximum boom angle.

This capacity is		boom angle.				
			Lifting Capa	cities at Zero Degree	e Boom Angle	
5			v ,	•	•	
Boom			Main	Boom Length in Fee	t	
Angle	32	40	50	60	70	
5	02	10			10	
00	16,100	9,970	5,850	3,490	1,950	
0	(26)	(33.8)	(43.8)	(53.8)	(63.8)	
	(')	(00.0)	(10.0)	(00.0)	(00.0)	
NOTE: () Refer	ence radii in feet.					

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

	32 - 102 ft.	26 - 45 ft.	9,920 lbs	50% 14' spread	Q 360°
.0				Pounds	
		**26 ft. LEN	IGTH	45 ft. LEN	GTH
	Feet	#4021 0° OFFSET	#4023 30° OFFSET	#4041 OFFSET	#4043 30° OFFSET
	35	8,200 (75)	_		
	40	7,090 (72.5)		*5,250 (76)	
	45	5,640 (70.5)	*5,780 (76)	5,250 (74)	
	50	4,470 (68)	5,620 (72.5)	5,050 (72)	
	55	3,510 (65)	4,520 (70)	4,210 (70)	
	60	2,720 (62.5)	3,600 (67)	3,430 (67.5)	*2,730 (76)
	65	2,020 (60)	2,780 (64.5)	2,770 (65.5)	2,730 (72.5)
	70	1,420 (57)	2,090 (61.5)	2,170 (63)	2,730 (70.5)
	75		1,490 (58.5)	1,650 (61)	2,600 (68)
	80		, ,	1,200 (58.5)	2,150 (65.5)
	85			. ,	1,660 (63)
	90				1,230 (60)
	Min. boom angle for indicated length (no load)	56°	57°	57°	59°
	Max, boom length at 0° boom angle (no load)	60	ft.	60 ft.	

load charts

1

BOOM EXTENSION CAPACITY NOTES:

1. All capacities above the bold line are based on structural strength of boom extension.

- 2. 26 ft. and 45 ft. boom extension lengths may be used for single line lifting service.
- 3. Radii listed are for a fully extended boom with the boom extension erected. For main boom lengths less than fully extended, the rated loads are determined by boom angle. Use only the column which corresponds to the boom extension length and offset for which the machine is configured. For boom angles not shown, use the rating of the next lower boom angle.

WARNING: Operation of this machine with heavier loads than the capacities listed is strictly prohibited. Machine tipping with boom extension occurs rapidly and without advance warning.

- 4. Boom angle is the angle above or below horizontal of the longitudinal axis of the boom base section after lifting rated load.
- 5. Capacities listed are with outriggers properly extended and vertical jacks set only.
- 6. When lifting over the main boom nose with 26 ft. or 45 ft. extension erected, the outriggers must be fully extended or 50% extended (14' spread).

NOTE: () Boom angles are in degrees. #LMI operating code. Refer to LMI manual for instructions. *This capacities based on maximum boom angle. **26 ft. capacities are also applicable to fixed offsettable ext. However, the LMI codes will change to #4051 and #4053 for 0° and 30° offset, researchive respectively.

RT535

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

A6-829-104124



load charts

		ω	Q		
32 - 60 ft.	9,920 lbs	Stationary	360°		
ſ			Pounds		
(Founds)	
		#9005	5		
		Main Boom Leng	th in Feet		
Feet	32	40	50	60	
10	22,950 (65)	22,950 (70.5)	*23,000 (76)		
12	21,150	21,850	21,600		
12	(60.5)	(67)	(72)		
15	14,300 (54)	15,300 (62)	15,950 (68.5)	13,850 (72.5)	
20	8,330	9,180	9,710	9,940	
	(40.5) 5,100	(53.5) 5,880	(62) 6,260	(67.5) 6,530	
25	(20)	(43)	(55)	(62)	
30		3,810 (29.5)	4,100 (47)	4,360 (56)	
35			2,630 (38)	2,870 (50)	
40			1,550 (26)	1,800 (43)	
Minimum boom indicated length			25	42	
Maximum boom length (ft.) at 40 0° boom angle (no load) NOTE: () Boom angles are in degrees. #LMI operating code. Refer to LMI manual for operating instructions. *This capacity is based on maximum boom angle. Lifting Capacities at 0° Boom ?ngle					
Boom	Main	Boom Length in	Feet		
Angle	32	40	-		
0°	4,600 (26)	2,700 (33.8)			
NOTE: () Refer	ence radii in feet.			A6-829-104125	

Q \bigcirc 32 - 60 ft. Pick & Carry (Max. 2.5 MPH) 9,920 lbs Boom Centered Over Front 20.5 x 25 OR 16 x 25 tires 11 Pounds Θ #9006 Main Boom Length in Feet Feet 32 40 50 60 26,850 (64.5) 27,250 (70) 10 23,150 23,500 12 (60.5) (67) 18,800 (53.5) 19,200 19,450 15 (62) (68) 13,600 (40.5) 14,500 (61.5) 14,150 14.550 20 (53) (67) 10,050 10,600 11,100 11,200 25 (19.5)(42.5) (54.5) (61.5) 8,040 (29) 8,570 (47) 8,740 (56) 30 6,650 6,810 35 (38) (49.5) 5,300 (42.5) 5,130 40 (26)4.090 45 (34.5) 3,090 50 (235)Minimum boom angle (°) for indicated length (no load) 0 Maximum boom length (ft.) at 0° boom angle (no load) 60 MOTE: () Boom angles are in degrees. #LMI operating code. Refer to LMI manual for operating instructions. Lifting Capacities at 0° Boom Angle Main Boom Length in Feet Boom Angle 32 40 50 60 9,480 6,530 4,190 2,440 0°


NOTE: () Reference radii in feet.

A6-829-104126

BOOM EXTENSION CAPACITY NOTES:

- 1. Capacities are in pounds and do not exceed 75% of tipping loads as determined by test in accordance with SAE J765.
- 2. Capacities are applicable to machines equipped with 20.5x25 (24 ply) tires at 75 psi cold inflation pressure, and 16.00x25 (28 ply) tires at 100 psi cold inflation pressure.
- 3. Capacities appearing above the bold line are based on structural strength and tipping should not be relied upon as a capacity limitation.
- 4. Capacities are applicable only with machine on firm level surface.
- 5. On rubber lifting with boom extensions not permitted.
- 6. For pick and carry operation, boom must be centered over front of machine, mechanical swing lock engaged and load restrained from swinging. When handling loads in the structural range with capacities close to maximum ratings, travel should be reduced to creep speeds.
- 7. Axle lockouts must be functioning when lifting on rubber.
- 8. All lifting depends on proper tire inflation, capacity and condition. Capacities must be reduced for lower tire inflation pressures. See lifting capacity chart for tire used. Damaged tires are hazardous to safe operation of crane.
- 9. Creep not over 200 ft. of movement in any 30 minute period and not exceeding 1 mph.

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

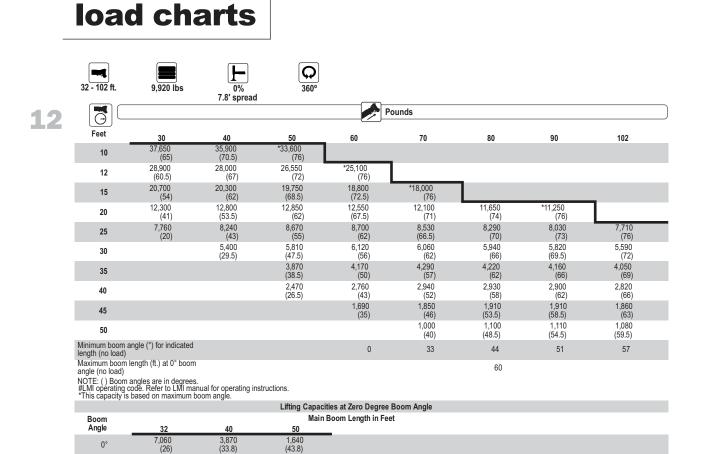

(26)

0°

NOTE: () Reference radii in feet.

A6-829-104122

RT535E

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Pounds

2,750

Pounds

3,850

5,130

	and the second se
	and the second s
	and the second sec
0	And the second se
~/ 0	
//	and the second s
11.00	× // ``
000	/ V(00)
	1.0
	1101301
5	//////~
	// & /
	-
1	
111)
1000	
	. 1
1/00	
1/00	t. //. \
1400/	1001
////	11001
// 11 =	
//	lon Tollon)
77 11	
// 1	V 110001
//	11-000
	10000
1/ 00 1	77 100
lloord	1// 74
(00) 000	12 11
100 201	AL U
1 ~ ~ 1	/// //
\sim 1	// M 11
1 1 -	~ // 11 //
1/0	01// 11 11
II Wain	
1 1/263	
000	N 1/ 1 1
	Yoo al
13 V	1/0001 01
100	11.000
	1 00 / 1 / 0 n V
~	X 1/00.1
/ \	- W 060/
()	00 000
1 1	100/
	\sim
~ ~ /	· · · · · · · · · · · · · · · · · · ·
	`
<u> </u>	
(())	
9	

13

Auxiliary Boom Nose	Pounds
	105
Hookblocks and Headache Balls	Pounds
35 Ton, 3 Sheave	623 +
35 Ton, 4 Sheave (CE)	774 +
7.5 Ton Overhaul Ball	369 +

Weight Reductions for Load Handling Devices

+Refer to rating plate for actual weight.

26 ft. Offsettable Boom Extension

26 ft.-45 ft. Tele. Boom Extension

*Reduction of main boom capacities

*Erected -

*Erected (Retracted) -

*Erected (Extended) -

When lifting over swingaway and/or jib combinations, deduct total weight of all load handling devices reeved over main boom nose directly from swingaway or jib capacity.

NOTE: All load handling devices and boom attachments are considered part of the load and suitable allowances MUST BE MADE for their combined weights. Weights are for Grove furnished equipment.

Hoists	Cable Specs	Permissible Line Pulls	Nominal Cable Length
Main & Aux.	5/8" (16 mm) Flex-X35 (35x7) Rotation Resistant (non-rotating) Min. Breaking Str. 61,200 lb.	11,640 lb.	450 ft.
Main	5/8⁼ (16 mm) 6x37 Class EIPS, IWRC Special Flexible Min. Breaking Str. 41,200 lb.	11,640 lb.	450 ft.


Hoist Performance

Wire Rope Layer	Hoist Line Pulls Available Ib.*	Drum Rope Capacity (ft.) Layer Total		
1	11,640	77	77	
2	10,480	85	162	
3	9,530	94	256	
4	8,730	102	358	
5	8,060	111	469	
6	7,490	119	588	

*Max. lifting capacity: 6x37 class = 11,640 lb.

35x7 class = 11,640 lb.

Working Area Diagram

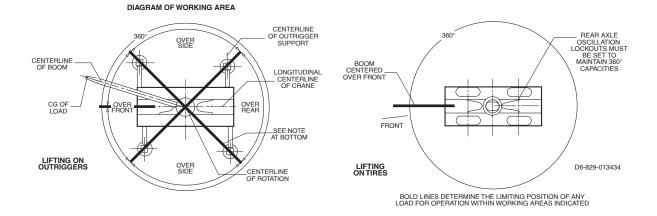

Bold lines determine the limiting position of any load for operation within working areas indicated.

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.



535

R



14



notes

15



RELIABLE CRANE SERVICE

Manitowoc Crane Group - Americas Manitowoc, Wisconsin Facility Tel: [Int + 001] 920 684 6621 Fax: [Int + 001] 920 683 6277 Shady Grove, Pennsylvania Facility Tel: [Int + 001] 717 597 8121 Fax: [Int + 001] 717 597 4062 Manitowoc Crane Group - EMEA Europe Middle East & Africa Tel: [Int + 33] (0) 191 565 6281 Fax: [Int + 33] (0) 4 72 18 20 20 Manitowoc Crane Group - UK Europe Middle East & Africa Tel: [Int + 44] (0) 191 565 6281 Fax: [Int + 44] (0) 191 564 0442 Manitowoc Crane Group - Germany (Sales, Parts & Service) Tel: [Int + 49](0) 2173 8909 0 Fax: [Int + 49] (0) 2173 8909-30 Manitowoc Crane Group - France France & Africa (Sales, Parts & Service) Tel: [Int + 33] (0) 1 303 13150 Fax: [Int + 33] (0) 1 303 86085 Manitowoc Crane Group - Netherlands (Sales, Parts & Service) Tel: [Int + 31] (0) 76 578 39 99 Fax: [Int + 31] (0) 76 578 39 78 Manitowoc Crane Group - Italy Italy & Southern Europe (Sales, Parts & Service) Tel: [Int + 39] (0) 331 49 33 11 Fax: [Int + 39] (0) 331 49 33 30 Manitowoc Crane Group - Portugal Portugal & Spain (Sales, Parts & Service) Tel: [Int + 351] (0) 22 968 08 89 Fax: [Int + 351] (0) 22 968 08 97 Manitowoc Crane Group - Singapore Asia/Pacific excl China (Sales, Parts & Service) Tel: [Int + 65] 6861 1733 Fax: [Int + 65] 6862 4040 / 4142 Manitowoc Crane Group - Shanghai China (Sales, Parts & Service) Tel: [Int + 86] (0) 21 64955555 Fax: [Int + 86] (0) 2164852038 Manitowoc Crane Group - Beijing China (Sales, Parts & Service) Tel: [Int + 86] (0) 10 646 71690 Fax: [Int + 86] (0) 10 646 71691 Manitowoc Crane Group - Middle East (Sales) Tel: [Int + 971] (0) 4 348 4478 Fax: [Int + 971] (0) 4 348 4478 (Parts & Service) Tel: [Int + 973] (0) 9 660 899 Fax: [Int + 973] (0) 2 707 740

Crane CARE

Distributed By:

www.manitowoccranegroup.com

Constant improvement and engineering progress make it necessary that we reserve the right to make specification, equipment, and price changes without notice. Illustrations shown may include optional equipment and accessories, and may not include all standard equipment.

0706-2M Printed in USA Form No. RT535E Part No. 06-004 Manitowoc Crane Group 2006

260 North Smith Ave. Corona, CA 92880