





# RT500C

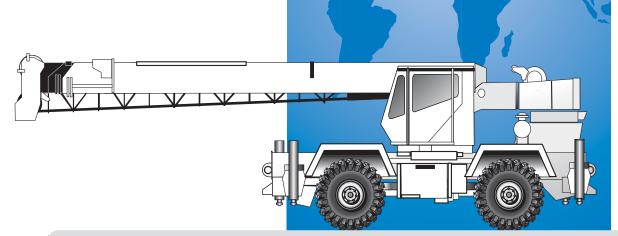


Rough Terrain Hydraulic Crane

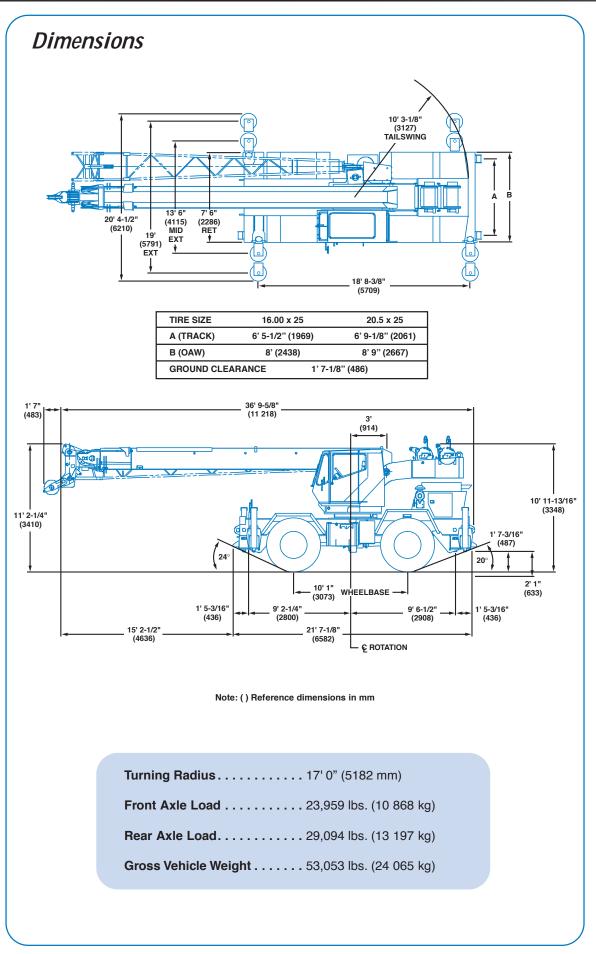




## Working range



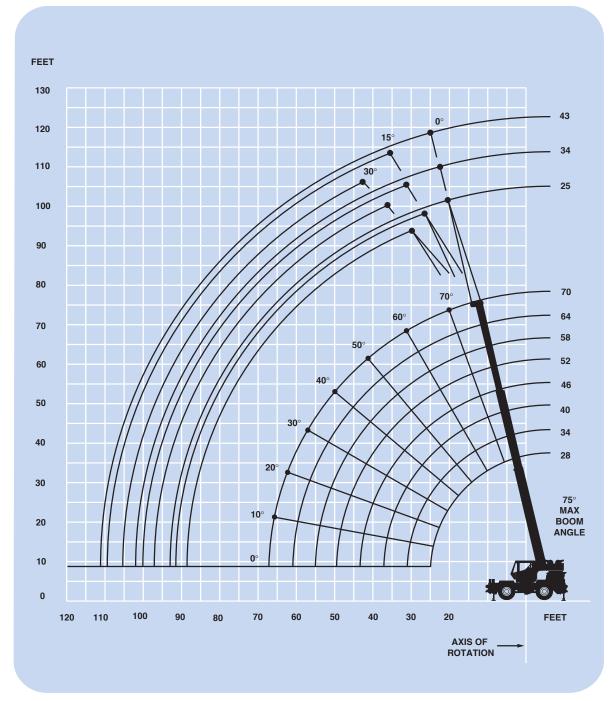

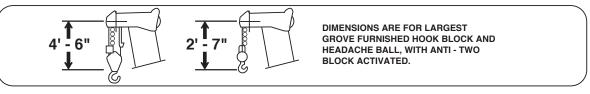



## Superstructure specifications

#### **Boom**

28 ft. - 70 ft. (8.5 m - 21.3 m) three-section, full power boom. Maximum tip height: 76 ft. (23.1 m).

#### \*Optional Jib

23 ft. (7.1 m) "A" frame jib offsettable at 0°, 15° or 30°. Stows beneath base boom section.

Maximum tip height: 98 ft. (29.9 m).

#### \*Optional Swingaway Extension

25 ft. (7.6 m) lattice swingaway boom extension. Stows alongside base boom section.

Maximum tip height: 102 ft. (31.0 m).

## \*Optional Telescopic Swingaway Extension

25 ft. to 34 ft. or 43 ft. (7.6 m to 10.4 m or 13.1 m) telescoping lattice swingaway extension with integral offset mechanism, offsettable at 0°, 15° or 30°. Stows alongside base boom section.

Maximum tip height: 120 ft. (36.6 m).

#### **Boom Nose**

Four steel sheaves mounted on heavy duty tapered roller bearings with removable pin-type rope guards. \*Optional removable auxiliary boom nose with removable pin type rope guard.

#### **Boom Elevation**

Two double acting hydraulic cylinders with integral holding valves provide elevation from 0° to 75°.

## Load Moment & Anti-Two Block System

Standard load moment and anti-two block system with audio-visual warning and control lever lockout. These systems provide electronic display of boom angle, length, radius, tip height, relative load moment, maximum permissible load, load indication and warning of impending two-block condition.

#### Cab

Full vision, all steel fabricated with acoustical lining and tinted safety glass throughout. Deluxe seat incorporates armrest mounted hydraulic single-axis controllers. Dash panel incoporates gauges for all engine functions. Other standard features include: telescoping tilt steering wheel, sliding side and rear windows, electric windshield wash/wipe, circulating air fan, manual skylight wiper, fire extinguisher, seat belt and ashtray.

#### **Swing**

Ball bearing swing circle with 360° continuous rotation. Grove planetary glide-swing with multi-disc wet brake. Spring applied, hydraulically released parking brake and plunger-type, one position, mechanical house lock and 360° positive swing lock operated from cab. Maximum speed: 2.5 RPM.

#### Counterweight

Removable, bolted to turntable mast. Main hoist: 10,170 lbs. (4613 kg). Main and Auxiliary hoist: 9,120 lbs. (4136 kg).

#### **Hydraulic System**

3 main gear pumps with a combined capacity of 112.5 GPM (426 LPM) driven by carrier engine through P.T.O. \*Optional pump disconnect with engine jogging switch. Maximum operating pressure: 2500 PSI (172.4 bar).

## Hoist Specifications Main or \*Auxiliary Hoist

Power up and down equal speed, grooved drum, planetary reduction with automatic spring applied multi-disc brake, hoist drum rotation indicators, cable followers.

Maximum Single	429 FPM
Line Speed:	(131 m/min)
Maximum Single	9,640 lbs.
Line Pull (1st Layer):	(4372 kg)
Maximum Permissible Line Pull w/5:1 Strength Factor:	9,080 lbs. (4119 kg) 5/8 in. (16 mm) 18 x 19 class
Maximum Rope Stowage:	375 ft. (114 m) 5/8 in. (16 m)

<sup>\*</sup>Denotes optional equipment



## Carrier specifications

#### Chassis

High strength alloy steel, all welded box section design with integral outrigger housings and front/rear lifting, towing and tie down lugs.

#### **Outrigger System**

Four hydraulic, telescoping, single-stage, double box beam outriggers with inverted jacks and integral holding valves. Three position setting. All steel fabricated, quick release type square outrigger floats, 16.5 in. (419 mm) diameter.

Maximum outrigger pad load: 50,254 lbs. (22 795 kg).

#### **Outrigger Controls**

Controls and crane level indicator located in cab.

#### Engine

Cummins 6BT 5.9 L, six cylinder, turbocharged, water cooled diesel. 130 bhp (97 kW) (Gross) @ 2,500 RPM. Maximum torque: 386 ft. lbs. (523 Nm) @ 1,400 RPM.

#### **Fuel Tank Capacity**

60 gallons (227 L)

#### **Transmission**

Remote mounted powershift with 6 forward and 6 reverse speeds. 3 in high range, 3 in low range. Rear axle disconnect for 4 x 2 travel.

## **Electrical System**

Two 12 V - maintenance free batteries, 625 CCA @ 0° F. 12 V starting and lighting.

#### **Drive**

4 x 4.

### Steering

Fully independent power steering:

Front: Full hydraulic steering wheel controlled. Full hydraulic hand lever controlled. Rear: Provides infinite variations of 4 main steering modes: front only, rear only, crab and coordinated.

#### **Axles**

(909) 222-0202

Front: Drive/steer with differential and planetary

reduction hubs rigid mounted to chassis.

Drive/steer with differential and planetary Rear:

reduction hubs pivot mounted at the center of chassis providing up to 12 in. (305 mm)

oscillation.

\*Optional: No spin differential on rear axle.

#### Oscillation Lockouts

Automatic full hydraulic lockouts on rear axle permit oscillation only with boom centered over the front. \*Optional oscillation lockout override control.

#### **Brakes**

Dual braking system, air over hydraulic operating on all wheels. Spring-applied, air released front axle mounted parking brake.

#### **Tires**

20.5 x 25 - 24PR earthmover type, tubeless. \*16.00 x 25 - 28PR earthmover type, tubeless.

#### Liahts

Full lighting package including turn indicators, head, tail, brake and hazard warning lights.

#### **Maximum Speed**

22.8 MPH (36.7 kph).

#### Gradeability (Theoretical)

110.5% (Based on 51,610 lbs. [23 410 kg] GVW) 20.5 x 25 tires, pumps disengaged, 70 ft. (21.3 m) boom.

#### Miscellaneous Standard Equipment

Full width steel fenders, dual rear view mirrors. hookblock tiedown sling, electronic back-up alarm, light package, front stowage well, control valve for auxiliary hoist, 360° positive swing lock.

## \*Optional Equipment

\*Auxiliary hoist

\*Boom mounted

worklights

\*360° flashing light

\*Cab spotlight

\*Tachometer

\*Cold start aid

(less canister)

\*Engine block heater

\*Electric skylight wiper, with opening skylight

\*Hookblocks

\*Tow winch - front mounted maximum pull:

15,000 lbs. (6804 kg);

maximum speed: 75 ft/min. (23 m/min).

\*Denotes optional equipment

\*Spare wheel assembly

\*Tire inflation kit

\*Tool kit

\*Pintle hook front/rear

\*High speed glide system

\*Propane or diesel heater/defroster

\*Air conditioning

\*Dual axis joystick

controllers


\*Hvdraulic oil cab heater

\*Headache ball

\*Emergency steer pump

\*LMI light bar



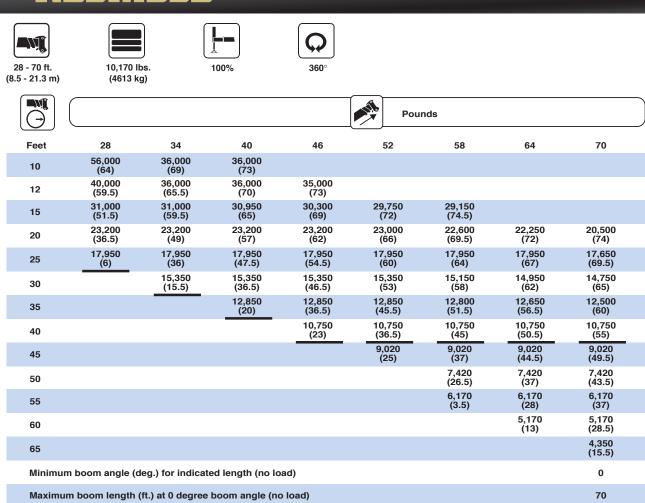

NOTE: ( ) Boom angles are in degrees.

A6-829-008639 & -003716H

Boom Angle	28	34	40	46	52	58	64	70
<b>0</b> °	15,286	12,000	9,230	7,050	5,630	4,440	3,480	2,800
	(25.1)	(31)	(37)	(43)	(49)	(55)	(61)	(66.6)

NOTE: () Reference radii are in feet.

A6-829-009460

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load charl, operating instructions and other instructional plates must be read and understood prior to operating the crane.

## RELIABLE CRANE SERVICE









28 - 70 ft. (8.5 - 21.3 m)

10,170 lbs. (4613 kg)

50% 13' 5" Spread

;

					Pound	ls		
Feet	28	34	40	46	52	58	64	70
10	49,200 (64)	36,000 (69)	36,000 (73)					
12	40,000 (59.5)	36,000 (65.5)	36,000 (70)	35,000 (73)				
15	31,000 (51.5)	31,000 (59.5)	30,950 (65)	30,300 (69)	29,750 (72)	29,150 (74.5)		
20	23,200 (36.5)	23,200 (49)	23,000 (57)	22,500 (62)	22,000 (66)	21,500 (69.5)	21,050 (72)	20,500 (74)
25	15,200 (6)	15,200 (36)	15,200 (47.5)	15,200 (54.5)	15,200 (60)	15,200 (64)	15,200 (67)	15,150 (69.5)
30		11,150 (15.5)	11,150 (36.5)	11,150 (46.5)	11,150 (53)	11,150 (58)	11,150 (62)	11,150 (65)
35			8,520 (20)	8,520 (36.5)	8,520 (45.5)	8,520 (51.5)	8,520 (56.5)	8,520 (60)
40				6,680 (23)	6,680 (36.5)	6,680 (45)	6,680 (50.5)	6,680 (55)
45					5,320 (25)	5,320 (37)	5,320 (44.5)	5,320 (49.5)
50						4,270 (26.5)	4,270 (37)	4,270 (43.5)
55						3,440 (3.5)	3,440 (28)	3,440 (37)
60							2,770 (13)	2,770 (28.5)
65								2,210 (15.5)
Minimun	n boom angle (de	eg.) for indicate	ed length (no lo	ad)				0
Maximur	m boom length (1	ft.) at 0 degree	boom angle (no	load)				70
NOTE: (	) Boom angles a	re in degrees.						
Boom			40	40		50	•	70
Angle	28	34	7.700	46	52	58	64	70
<b>0</b> °	15,150 (25.1)	10,500 (31)	7,720 (37)	5,810 (43)	4,460 (49)	3,440 (55)	2,650 (61)	2,050 (66.6)

NOTE: ( ) Reference radii in feet.

A6-829-012237

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.











28 - 70 ft. (8.5 - 21.3 m)

10,170 lbs. (4613 kg)

7' 5" Spread


					Poun	ds		
Feet	28	34	40	46	52	58	64	70
10	28,700 (64)	28,700 (69)	28,050 (73)					
12	20,950 (59.5)	20,950 (65.5)	20,950 (70)	20,950 (73)				
15	14,450 (51.5)	14,450 (59.5)	14,450 (65)	14,450 (69)	14,450 (72)	14,450 (74.5)		
20	9,020 (36.5)	9,020 (49)	9,020 (57)	9,020 (62)	9,020 (66)	9,020 (69.5)	9,020 (72)	9,020 (74)
25	6,120 (6)	6,120 (36)	6,120 (47.5)	6,120 (54.5)	6,120 (60)	6,120 (64)	6,120 (67)	6,120 (69.5)
30		4,330 (15.5)	4,330 (36.5)	4,330 (46.5)	4,330 (53)	4,330 (58)	4,330 (62)	4,330 (65)
35			3,110 (20)	3,110 (36.5)	3,110 (45.5)	3,110 (51.5)	3,110 (56.5)	3,110 (60)
40				2,230 (23)	2,230 (36.5)	2,230 (45)	2,230 (50.5)	2,230 (55)
45					1,560 (25)	1,560 (37)	1,560 (44.5)	1,560 (49.5)
50						1,030 (26.5)	1,030 (37)	1,030 (43.5)
Minimum	boom angle (de	eg.) for indicate	ed length (no loa	ad)				40.5
Maximun	n boom length (1	ft.) at 0 degree	boom angle (no	load)				52
NOTE: ()	Boom angles a	re in degrees.						
Boom Angle	28	34	40	46	52			
<b>0</b> °	6,090 (25.1)	4,050 (31)	2,720 (37)	1,800 (43)	1,130 (49)			

NOTE: () Reference radii in feet.

A6-829-012238

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.



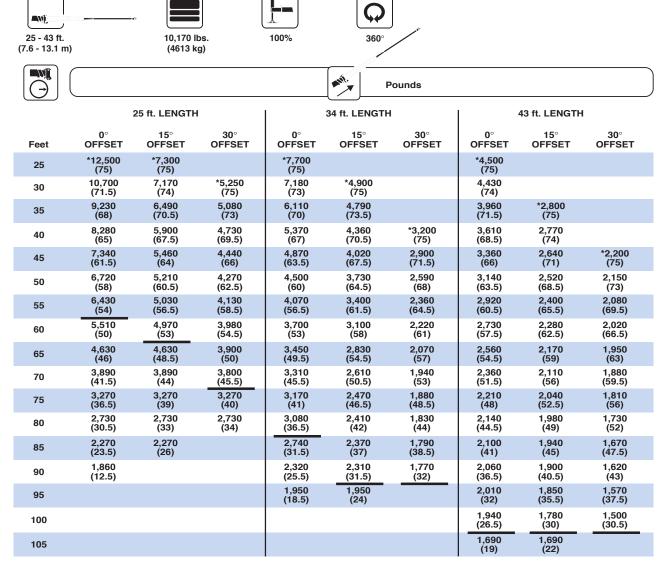

NOTE: () Boom angles are in degrees.

A6-829-008672

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRAINE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

<sup>\*</sup>This capacity is based upon maximum boom angle.













25 - 43 ft. (7.6 - 13.1 m)

10,170 lbs. (4613 kg)

50% 13' 5" Spread



**Pounds** 

	2	25 ft. LENGTH	I	] :	34 ft. LENGTH	l	43 ft. LENGTH		
Feet	0°	15°	30°	0°	15°	30°	0°	15°	30°
	OFFSET	OFFSET	OFFSET	OFFSET	OFFSET	OFFSET	OFFSET	OFFSET	OFFSET
25	*12,500 (75)	*7,300 (75)		*7,700 (75)			*4,500 (75)		
30	10,700 (71.5)	7,170 (74)	*5,250 (75)	7,180 (73)	*4,900 (75)		4,430 (74)		
35	9,230 (68)	6,490 (70.5)	5,080 (73)	6,110 (70)	4,790 (73.5)		3,960 (71.5)	*2,800 (75)	
40	7,370 (65)	5,900 (67.5)	4,730 (69.5)	5,370 (67)	4,360 (70.5)	*3,200 (75)	3,610 (68.5)	2,770 (74)	
45	5,850	5,460	4,440	4,870	4,020	2,900	3,360	2,640	*2,200
	(61.5)	(64)	(66)	(63.5)	(67.5)	(71.5)	(66)	(71)	(75)
50	4,670	4,670	4,270	4,500	3,730	2,590	3,140	2,520	2,150
	(58)	(60.5)	(62.5)	(60)	(64.5)	(68)	(63.5)	(68.5)	(73)
55	3,740	3,740	3,740	4,070	3,400	2,360	2,920	2,400	2,080
	(54)	(56.5)	(58.5)	(56.5)	(61.5)	(64.5)	(60.5)	(65.5)	(69.5)
60	2,990	2,990	2,990	3,510	3,100	2,220	2,730	2,280	2,020
	(50)	(53)	(54.5)	(53)	(58)	(61)	(57.5)	(62.5)	(66.5)
65	2,360	2,360	2,360	2,870	2,830	2,070	2,560	2,170	1,950
	(46)	(48.5)	(50)	(49.5)	(54.5)	(57)	(54.5)	(59)	(63)
70	1,840	1,840	1,840	2,330	2,330	1,940	2,360	2,110	1,880
	(41.5)	(44)	(45.5)	(45.5)	(50.5)	(53)	(51.5)	(56)	(59.5)
75	1,390	1,390	1,390	1,860	1,860	1,860	2,050	2,040	1,810
	(36.5)	(39)	(40)	(41)	(46.5)	(48.5)	(48)	(52.5)	(56)
80	1,000	1,000	1,000	1,460	1,460	1,460	1,690	1,690	1,690
	(30.5)	(33)	(34)	(36.5)	(42)	(44)	(44.5)	(49)	(52)
85				1,120 (31.5)	1,120 (37)	1,120 (38.5)	1,370 (41)	1,370 (45)	1,370 (47.5)
90							1,090 (36.5)	1,090 (40.5)	1,090 (43)

A6-829-012453

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

NOTE: ( ) Boom angles are in degrees. \*This capacity is based upon maximum boom angle.









10,170 lbs. (4613 kg)



100%



Feet	BOOM ANGLE (Ref.)	CAPACITY (lbs.)
25	75.0	*12,500
30	71.5	10,700
35	68.0	9,230
40	65.0	8,280
45	61.5	7,340
50	58.0	6,720
55	54.0	6,430
60	50.0	6,070
65	46.0	5,180
70	41.5	4,440
75	36.5	3,820
80	30.5	3,280
85	23.5	2,810
90	12.5	2,400

<sup>90 .</sup>\_..
\*This capacity is based upon maximum boom angle.

A6-829-008673







10,170 lbs. (4613 kg)



50% 13' 5" Spread



$^{\prime}$	
П	77
П	~
П	( -7
1	\ ¬





Pounds

Feet	BOOM ANGLE (Ref.)	CAPACITY (lbs.)
25	75.0	*12,500
30	71.5	10,700
35	68.0	9,230
40	65.0	7,760
45	61.5	6,380
50	58.0	5,200
55	54.0	4,270
60	50.0	3,520
65	46.0	2,890
70	41.5	2,360
75	36.5	1,910
80	30.5	1,530
85	23.5	1,190

<sup>\*</sup>This capacity is based upon maximum boom angle.

A6-829-012329

11

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

## RELIABLE CRANE SERVICE











(8.5 - 21.3 m)

10,170 lbs. (4613 kg)

24 Ply Stationary

		0.	ationary		$\overline{}$			
					Pound	ds		
Feet	28	34	40	46	52	58	64	70
10	26,200 (64)	26,200 (69)						
12	19,350 (59.5)	19,350 (65.5)	16,000 (70)					
15	13,200 (51.5)	13,200 (59.5)	13,200 (65)	13,200 (69)				
20	7,910 (36.5)	7,910 (49)	7,910 (57)	7,910 (62)	7,910 (66)	7,400 (69.5)		
25	5,060 (6)	5,060 (36)	5,060 (47.5)	5,060 (54.5)	5,060 (60)	5,060 (64)	5,060 (67)	5,060 (69.5)
30		3,600 (15.5)	3,600 (36.5)	3,600 (46.5)	3,600 (53)	3,600 (58)	3,600 (62)	3,600 (65)
35			2,610 (20)	2,610 (36.5)	2,610 (45.5)	2,610 (51.5)	2,610 (56.5)	2,610 (60)
40				1,890 (23)	1,890 (36.5)	1,890 (45)	1,890 (50.5)	1,890 (55)
45					1,340 (25)	1,340 (37)	1,340 (44.5)	1,340 (49.5)
50						910 (26.5)	910 (37)	910 (43.5)

NOTE: () Boom angles are in degrees.

A6-829-009074

Boom Angle	28	34	40	46
<b>0</b> °	5,030	3,360	2,300	1,540
	(25.1)	(31)	(37)	(43)

NOTE: () Reference radii are in feet.

A6-829-009460

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.











(8.5 - 21.3 m)

10,170 lbs. (4613 kg)

24 Ply Stationary

**Defined Arc** Over Front ±6°

_	,

**Pounds** 

( <del>→</del> )   '								
Feet	28	34	40	46	52	58	64	70
10	28,650 (64)	26,200 (69)	40	40	V2	30		70
12	24,950 (59.5)	24,950 (65.5)	21,000 (70)					
15	20,900 (51.5)	20,900 (59.5)	20,900 (65)	16,500 (69)				
20	14,900 (36.5)	14,900 (49)	14,900 (57)	12,200 (62)	12,200 (66)	12,200 (69.5)		
25	9,900 (6)	9,900 (36)	9,900 (47.5)	9,900 (54.5)	9,400 (60)	9,400 (64)	9,400 (67)	9,400 (69.5)
30		7,350 (15.5)	7,350 (36.5)	7,350 (46.5)	7,000 (53)	7,000 (58)	7,000 (62)	7,000 (65)
35			5,660 (20)	5,660 (36.5)	5,660 (45.5)	5,600 (51.5)	5,600 (56.5)	5,600 (60)
40				4,450 (23)	4,450 (36.5)	4,450 (45)	4,450 (50.5)	4,450 (55)
45					3,550 (25)	3,550 (37)	3,550 (44.5)	3,550 (49.5)
50						2,850 (26.5)	2,850 (37)	2,850 (43.5)
55						2,290 (3.5)	2,290 (28)	2,290 (37)
60							1,840 (13)	1,840 (28.5)
65								1,460 (15.5)

NOTE: () Boom angles are in degrees.

A6-829-009073A

Boom Angle	28	34	40	46	52	58	64	70
<b>0</b> °	9,860	6,940	5,130	3,880	2,980	2,290	1,760	1,350
	(25.1)	(31)	(37)	(43)	(49)	(55)	(61)	(66.6)

NOTE: ( ) Reference radii are in feet.

A6-829-009460

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load charl, operating instructions and other instructional plates must be read and understood prior to operating the crane.

## RELIABLE CRANE SERVICE





10,170 lbs. (4613 kg)



20.5 x 25 - 24 Ply Pick & Carry (Up to 2.5 MPH)



**Boom Centered** Over Front



60

65

		(-1	,		Pound	ls		
Feet	28	34	40	46	52	58	64	70
10	33,800 (64)							
12	29,000 (59.5)							
15	23,600 (51.5)	23,600 (59.5)	23,600 (65)	23,600 (69)				
20	14,900 (36.5)	14,900 (49)	14,900 (57)	14,900 (62)	12,200 (66)	12,200 (69.5)		
25	9,900 (6)	9,900 (36)	9,900 (47.5)	9,900 (54.5)	9,900 (60)	9,400 (64)	9,400 (67)	
30		7,180 (15.5)	7,180 (36.5)	7,180 (46.5)	7,180 (53)	7,180 (58)	7,000 (62)	7,000 (65)
35			5,660 (20)	5,660 (36.5)	5,660 (45.5)	5,660 (51.5)	5,660 (56.5)	5,600 (60)
40				4,450 (23)	4,450 (36.5)	4,450 (45)	4,450 (50.5)	4,450 (55)
45					3,550 (25)	3,550 (37)	3,550 (44.5)	3,550 (49.5)
50						2,850 (26.5)	2,850 (37)	2,850 (43.5)
55						2,290 (3.5)	2,290 (28)	2,290 (37)

NOTE: () Boom angles are in degrees.

A6-829-009075

1,840 (28.5)

1,460 (15.5)

1,840 (13)

Boom									
Angle	28	34	40	46	52	58	64	70	
<b>0</b> °	8,970 (25.1)	6,870 (31)	5,130 (37)	3,880 (43)	2,980 (49)	2,290 (55)	1,760 (61)	1,350 (66.6)	


NOTE: () Reference radii are in feet.


A6-829-009460


THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load charl, operating instructions and other instructional plates must be read and understood prior to operating the crane.




## Working range

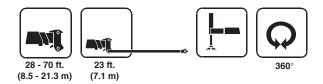

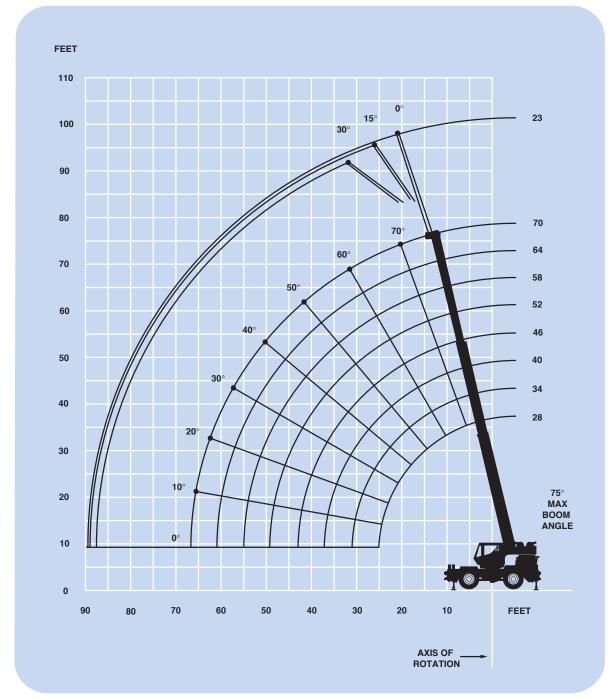


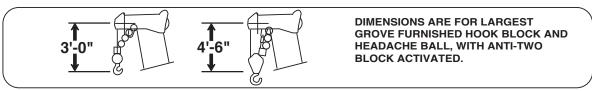



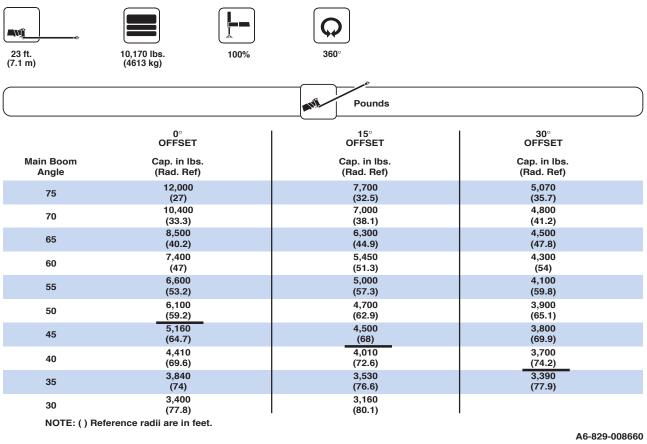

A0 023 000000

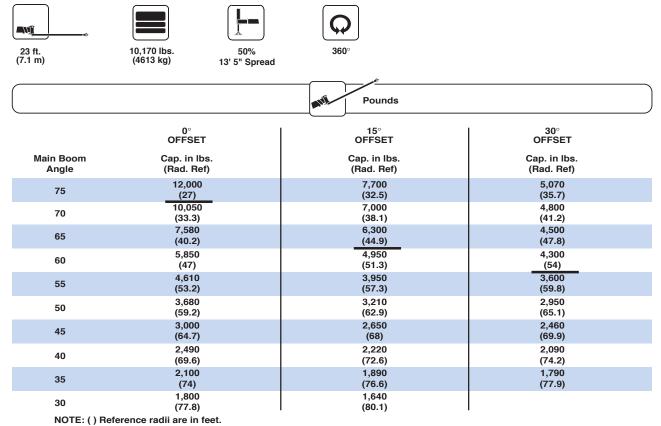

A6-829-013238

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE. The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.





## Rated lifting capacities

#### NOTES FOR LIFTING CAPACITIES


WARNING: THIS CHART IS ONLY A GUIDE.
The notes below are for illustration only and should not be relied upon to operate the crane.
The individual crane's load chart, operating instructions and other instruction plates must be read and understood prior to operating the crane.


- 1. All rated loads meet ANSI/ASME B30.5 Mobile and Locomotive Cranes. Testing and development were performed to SAEJ1063, Cantilevered Boom Crane Structures, Method of Test and SAEJ765 Crane Stability Test Code.
- 2. Rated loads include the weight of hookblock, slings and auxiliary lifting devices and their weights shall be subtracted from the listed rating to obtain the net load to be lifted. When more than the minimum required hoist reeving is used, the additional rope weight shall be considered part of the load to be handled.
- 3. Capacities appearing above the bold line are based on structural strength. Tipping should never be relied upon as a capacity indication.
- 4. The machine shall be leveled on a firm supporting surface. Depending on the nature of the supporting surface, it may be necessary to have structural supports under the outrigger floats or tires to spread the load to a larger bearing surface.
- 5. When either boom length or radius or both are between values listed, the smallest load shown at either the next larger radius or next longer or shorter boom length shall be used.
- 6. Tires shall be inflated to the recommended pressure before lifting on rubber.
- 7. For outrigger operation, outriggers shall be properly extended with tires raised free of crane weight before operating the boom or lifting loads.

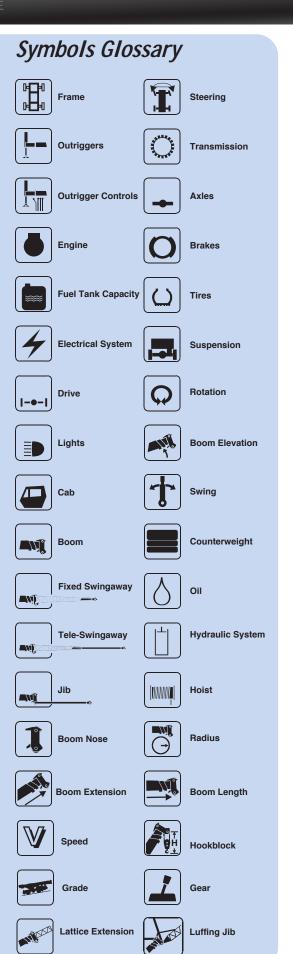


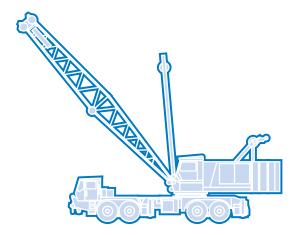



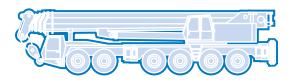

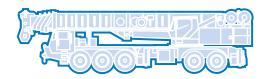

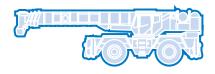





#### Bigge Crane and Rigging Co.

10700 Bigge Avenue San Leandro, CA 94577

Phone: (888) 337-BIGGE or (510) 638-8100

Fax: (510) 639-4053 Email: info@bigge.com Web site: www.bigge.com



#### Grove Worldwide - World Headquarters **Grove North America**

1565 Buchanan Trail East P.O. Box 21 Shady Grove, Pennsylvania 17256, U.S.A. Tel: [Int + 1] (717) 597-8121 Fax: [Int + 1] (717) 597-4062 Western Hemisphere, Asia/Pacific

#### **Grove Europe Limited\***

Sunderland SR4 6TT, England Tel: [Int + 44] 191 565-6281 Fax: [Int + 44] 191 564-0442 Europe, Africa, Middle East

#### **Grove Europe Limited\***

P.O. Box No. 268 4A Kimber Road Abingdon, Oxfordshire, 0X141SG Tel: [Int + 44] 1235 55-3184 Fax: [Int + 44] 1235 55-3218 \*Grove Europe Limited, Registered in England, Number 1845128, Registered office, Crown Works, Pallion, Sunderland, Tyne & Wear, England SR4 6TT

#### **Deutsche Grove GmbH** Sales and Service

Helmholtzstrasse 12, Postfach 5026 D-40750 Langenfeld, Germany Tel: [Int + 49] (2173) 8909-0 Fax: [Int + 49] (2173) 8909-30

#### Wilhelmshaven Works

Industriegelande West, Postfach 1853 D-26358 Wilhelmshaven, Germany Tel: [Int + 49] (4421) 294-0 Fax: [Int + 49] (4421) 294-301

#### Grove France S.A.

16. chaussée Jules-César, 95520 OSNY B.P. 203, 95523 CERGY PONTOISE CEDEX France Tel: [Int + 33] (1) 30313150

Int: [Int + 33] (1) 30386085

#### Grove Asia/Pacific - Regional Office

171 Chin Swee Road #06-01 San Centre Singapore 0316 Tel: [Int + 65] 536-6112 Fax: [Int + 65] 536-6119 Asia/Pacific, Near East

#### **Grove China - Representative Office**

Beijing Suite 6074 No. 33 East Chang An Avenue Beijing, 100004, China Tel: [Int + 86] (10) 513-7766 Fax: [Int + 86] (10) 513-7307

#### **Grove Product Support**

Western Hemisphere, Asia/Pacific 1086 Wayne Avenue Chambersburg, Pennsylvania USA Tel: [Int + 1] (717) 263-5100 Fax: [Int + 1] (717) 267-0404

Europe, Africa, Middle East Sunderland SR4 6TT, England Tel: [Int + 44] 191 565-6281 Parts Fax: [Int + 44] 191 510-9242 Service Fax: [Int + 44] 191 510-9560

http://www.groveworldwide.com

Constant improvement and engineering progress make it necessary that we reserve the right to make specification, equipment, and price changes without notice. Illustrations shown may include optional equipment and accessories and may not include all standard equipment.

Distributed By:			

Form No.: SBRT500C Part No.: 3-484 1197-10M Printed in U.S.A.